
Changing the cutting head on the strimmer/brushcutter

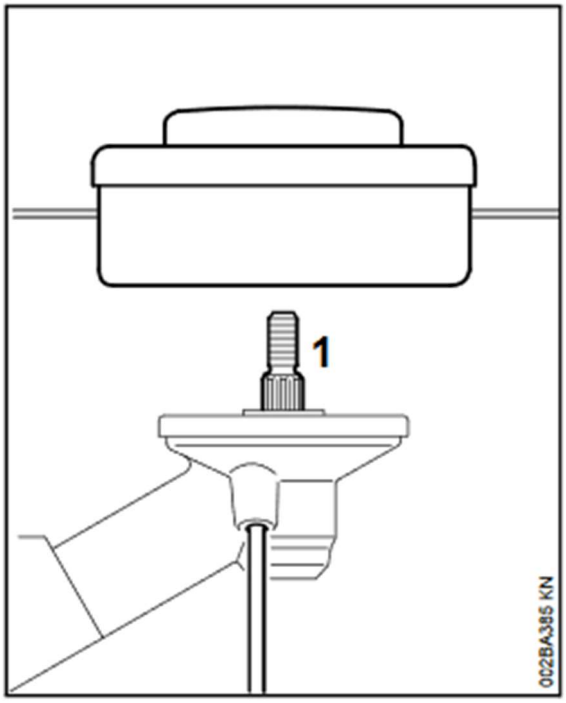


Installing strimmer head

Push the screwdriver into the blocking hole. Rotate the shaft, until it slips into position and stops the shaft from turning.
Turn the cutting head **anticlockwise** to screw the cutting head into position.

Removing the strimming head.

Push the screwdriver into the blocking hole. Rotate the shaft, until it slips into position and stops the shaft from turning. Turn the cutting head **clockwise** to unscrew the head. (left hand thread

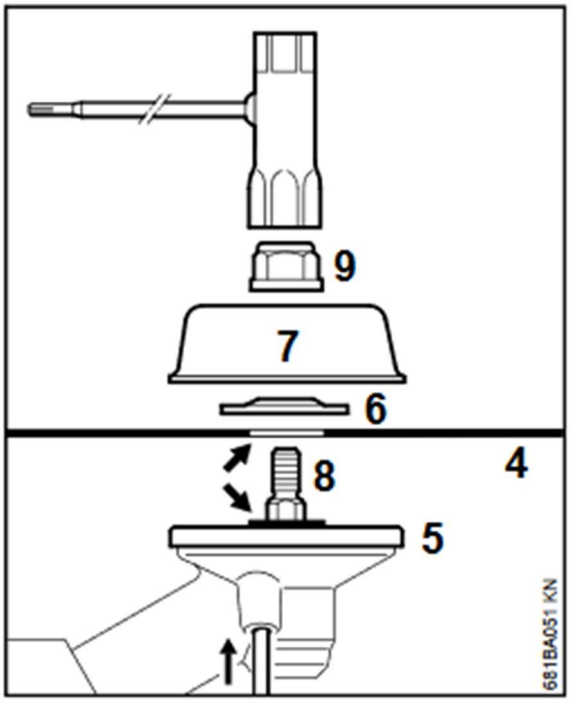

Installing the brush cutter head

Stop the shaft rotating by pushing the screwdriver into the blocking hole, turn the shaft until it slip into position and stops the shaft turning .

Ensure the parts are put over the shaft (8) in the following order.
5. thrust plate.
4. blade
6. thrust washer
7. rider plate
9. mounting bolt
Use the wrench to tighten up the bolt by turning **anticlockwise** (left-hand thread).

Removing the brushcutter head

Block the shaft with the screwdriver. Unscrew the nut by turning **clockwise**. Remove all the parts except for the thrust plate (5) and the washer underneath.